

Certificate HK07/01191.00

The management system of

**ELITEGROUP COMPUTER  
SYSTEMS CO., LTD.  
ECS MANUFACTURING  
(SHENZHEN) CO., LTD.**

2F, No.240, Sec.1, Nei Hu Road, Taipei, Taiwan 114, R.O.C  
No.20 & No.26 (Except 1F, 2F&3F) Free Trade Zone, Shatoujiao,  
Shenzhen City, Guangdong Province, China  
has been assessed and certified as meeting the requirements of

**ISO 9001:2000**

For the following activities

**Design and Sales of Mainboards, Personal Computers,  
Notebooks, and Peripheral Cards;  
Design and Manufacturing of Mainboards and Peripheral Cards.**

Further certifications regarding the scope of this certificate and the applicability of  
ISO 9001:2000 requirements may be obtained by consulting the organization

This certificate is valid from 16 March 2007 until 15 March 2010  
Issue 1. Certified with SGS since March 2007

Multiple certificates have been issued for this scope  
The main certificate is numbered HK07/01191.00

Authorised by

*P. Earl*

SGS United Kingdom Ltd Systems & Services Certification  
Rossmore Business Park, Epsom, Surrey, Surrey, UK  
t +44 (0)151 350-6666 f +44 (0)151 350-6600 www.sgs.com

Page 1 of 1

**SGS**



printed on recycled paper and printed by a small British company printing for sustainable



Certificate No.  
PRC-HSPM-1172

Issued: July 10, 2007  
Revision: N/A  
Expiration: July 09, 2010

**IECQ Certificate of Hazardous Substance Process Management (HSPM)  
applicable to the European Directive 2002/95/EC ("RoHS") requirements.**

The Supervising Inspectorate (SGS-CSTC Standards Technical Services Co., Ltd.), sponsored by the United States National Authorized Institution, ECCB certify that

**ECS Manufacturing (Shenzhen) Co., Ltd.**

No. 20 & 26 (except 1F, 2F & 3F),  
Free Trade Zone, Shatoujiao,  
Shenzhen, Guangdong Province, P.R. China

Has developed and implemented Hazardous Substances Process Management, procedures, and related processes in compliance with the applicable requirements for HSPM organization approval which is in accordance with the Basic Rules IECQ-01 and Rules of Procedure QC 001002-3 "IECQ Hazardous Substance Process Management" of the IEC Quality Assessment System for Electronic Components (IECQ), and with respect to the Specification QC 080000 IECQ HSPM.

**This certification is applicable to all electronic components and related  
materials and processes for the**

Design and manufacture of Mainboards and Peripheral Cards.

**Issued by Certification Authorities:**



Electronic Component Certification Board

Signed:

Stanley H. Salot Jr. - President, ECCB  
ECCB  
PO Box 9041  
Midland, Texas 79708  
Tel: (432) 697-9970 Fax: (866) 260-6181  
Web Site: [www.eccb.org](http://www.eccb.org)



SGS-CSTC Standards Technical Services Co., Ltd  
16F Century Yuhui Mansion  
73 Fucheng Road  
Beijing, China  
Web Site: [www.sgs.com](http://www.sgs.com)

The validity of this certificate is maintained through on-going surveillance inspections.

Note: This certificate is valid only in conjunction with the approval document(s). This approval and this certificate may be suspended or withdrawn in accordance with the Rules of Procedure of the IECQ. This certificate remains the property of the body which granted it.

## Preface

### Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

Version 1.0

### Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

### Trademark Recognition

Microsoft, MS-DOS and Windows are registered trademarks of Microsoft Corp.

MMX, Pentium, Pentium-II, Pentium-III, Celeron are registered trademarks of Intel Corporation.

Other product names used in this manual are the properties of their respective owners and are acknowledged.

### Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment onto an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Shielded interconnect cables and a shielded AC power cable must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

## Preface

## Declaration of Conformity

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation

## Canadian Department of Communications

This class B digital apparatus meets all requirements of the Canadian Interference-causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## About the Manual

The manual consists of the following:

<b>Chapter 1</b> <b>Introducing the Motherboard</b>	Describes features of the motherboard.  Go to ➞ page 1
<b>Chapter 2</b> <b>Installing the Motherboard</b>	Describes installation of motherboard components.  Go to ➞ page 7
<b>Chapter 3</b> <b>Using BIOS</b>	Provides information on using the BIOS Setup Utility.  Go to ➞ page 27
<b>Chapter 4</b> <b>Using the Motherboard Software</b>	Describes the motherboard software  Go to ➞ page 43

## **TABLE OF CONTENTS**

---

<b>Preface</b>	<b>i</b>
<b>Chapter 1</b>	<b>1</b>
<b>Introducing the Motherboard</b>	<b>1</b>
Introduction.....	1
Feature.....	2
Motherboard Components.....	5
 <b>Chapter 2</b>	 <b>7</b>
<b>Installing the Motherboard</b>	<b>7</b>
Safety Precautions.....	7
Choosing a Computer Case.....	7
Installing the Motherboard in a Case.....	7
Checking Jumper Settings.....	8
<i>Setting Jumpers.....</i>	<i>8</i>
<i>Checking Jumper Settings.....</i>	<i>9</i>
<i>Jumper Settings.....</i>	<i>9</i>
Installing Hardware.....	10
<i>Installing the Processor.....</i>	<i>10</i>
<i>Installing Memory Modules.....</i>	<i>12</i>
<i>Expansion Slots.....</i>	<i>15</i>
<i>Connecting Optional Devices.....</i>	<i>17</i>
<i>Installing a SATA Hard Drive.....</i>	<i>20</i>
<i>Installing a Floppy Diskette Drive.....</i>	<i>21</i>
Connecting I/O Devices.....	22
Connecting Case Components.....	23
<i>Front Panel Header.....</i>	<i>25</i>
 <b>Chapter 3</b>	 <b>27</b>
<b>Using BIOS</b>	<b>27</b>
About the Setup Utility.....	27
<i>The Standard Configuration.....</i>	<i>27</i>
<i>Entering the Setup Utility.....</i>	<i>27</i>
Using BIOS.....	28
<i>Standard CMOS Setup.....</i>	<i>29</i>
<i>Advanced Setup.....</i>	<i>31</i>
<i>Advanced Chipset Setup.....</i>	<i>33</i>

<i>Integrated Peripherals</i> .....	34
<i>Power Management Setup</i> .....	35
<i>PCI/PnP Setup</i> .....	36
<i>PC Health Status</i> .....	37
<i>Frequency/Voltage Control</i> .....	39
<i>Load Default Settings</i> .....	40
<i>Supervisor Password</i> .....	40
<i>User Password</i> .....	41
<i>Save &amp; Exit Setup</i> .....	41
<i>Exit Without Saving</i> .....	41
<i>Updating the BIOS</i> .....	42

## Chapter 4 **43**

### **Using the Motherboard Software 43**

About the Software CD-ROM.....	43
Auto-installing under Windows XP/Vista.....	43
<i>Running Setup</i> .....	44
Manual Installation.....	48
Utility Software Reference.....	48
HDMI Audio Setting SOP.....	49

## Chapter 1

### *Introducing the Motherboard*

---

#### **Introduction**

Thank you for choosing the G45T-M2 motherboard. This motherboard is a high performance, enhanced function motherboard designed to support the LGA775 socket Intel® Yorkfield/Wolfdale/Core™ 2 Quad/Core™ 2 Duo/Pentium® Dual-Core (E21XX series)/Celeron® Dual-Core/Celeron® 4xx processors for high-end business or personal desktop markets.

The motherboard incorporates the G45 Northbridge (NB) and ICH10 Southbridge (SB) chipsets. The Northbridge supports a Front Side Bus (FSB) frequency of 1333/1066/800 MHz using a scalable FSB Vcc\_CPU. The memory controller supports DDR2 memory DIMM frequencies of 800/667. It supports four DDR2 Sockets with up to maximum memory of 16 GB. DDR2 Maximum memory bandwidth of 12.8 GB/s in dual-channel symmetric mode assuming DDR2 800 MHz. High resolution graphics via one PCI Express slot, intended for Graphics Interface, is fully compliant to the PCI Express Base Specification revision 2.0.

The ICH10 Southbridge supports two PCI slots which are PCI 2.3 compliant. In addition, one PCI Express x1 slot is supported. It implements an EHCI compliant interface that provides 480 Mb/s bandwidth for 12 USB 2.0 ports (4 USB ports and 4 USB 2.0 headers support additional 8 USB ports). The Southbridge integrates a Serial ATA host controller, supporting six SATA ports with maximum transfer rate up to 3.0 Gb/s each.

The motherboard is equipped with advanced full set of I/O ports in the rear panel, including PS/2 mouse and keyboard connectors, one DVI port, one VGA port, four USB ports, one LAN port and audio jacks for microphone, line-in and 6/8-channel (optional) line-out.

## Feature

### Processor

The motherboard uses an LGA775 type of Intel® Yorkfield/Wolfdale/Core™ 2 Quad/Core™ 2 Duo/Pentium® Dual-Core (E21XX series)/Celeron® Dual-Core/Celeron® 4xx processors that carries the following features:

- Accommodates Intel® Yorkfield/Wolfdale/Core™ 2 Quad/Core™ 2 Duo/Pentium® Dual-Core (E21XX series)/Celeron® Dual-Core/Celeron® 4xx processors
- Supports a system bus (FSB) of 1333/1066/800 MHz
- Supports “Hyper-Threading” technology CPU

“Hyper-Threading” technology enables the operating system into thinking it’s hooked up to two processors, allowing two threads to be run in parallel, both on separate “logical” processors within the same physical processor.

### Chipset

The G45 Northbridge (NB) and ICH10 Southbridge (SB) chipsets are based on an innovative and scalable architecture with proven reliability and performance.

- |                       |  |
|-----------------------|--|
| <b>G45<br/>(NB)</b>   | <ul style="list-style-type: none"> <li>• Supports 36-bit host bus addressing, allowing the CPU to access the entire 64 GB of the memory address space</li> <li>• 2 GB/s point-to-point Direct Media Interface (DMI) to ICH10 (1 GB/s each direction)</li> <li>• Supports 512-Mb, 1-Gb and 2-Gb DDR2 and 512-Mb and 1-Gb DDR3 technologies for x8 and x16 devices</li> <li>• One, 16-lane (x16) PCI Express port intended for supporting up to two external PCI Express graphics card in bifurcated mode, fully compatible to the PCI Express Base Specification revision 2.0</li> <li>• An integrated graphics device (IGD) delivering cost competitive 3D, 2D and video capabilities</li> </ul> |
| <b>ICH10<br/>(SB)</b> | <ul style="list-style-type: none"> <li>• Enhanced DMA Controller, Timer/Counter functions, and Interrupt Controller</li> <li>• Compliant with PCI Express Base Specification, Revision 1.1</li> <li>• Compliant with PCI 2.3 specification</li> <li>• Integrated SATA 3.0 Gb/s Host Controller</li> <li>• Integrated USB 2.0 Host Controller supporting up to twelve USB 2.0 ports</li> </ul>  |

### Memory

- Supports DDR2 800/667 DDR SDRAM with Dual-channel architecture
- Accommodates four unbuffered DIMMs
- Up to 4 GB per DIMM with maximum memory size up to 16 GB

Introducing the Motherboard



## Audio (optional)

This motherboard may support either of the following Audio chipsets:

<ul style="list-style-type: none"> <li>• 7.1 + 2 channel High Definition Audio Codec</li> <li>• All DACs Support 192k/96k/48k/44.1kHz DAC sample rate</li> <li>• High-quality analog differential CD input</li> <li>• Meets Microsoft WHQL/WLP 3.0 audio requirements</li> <li>• Direct Sound 3D™ compatible</li> </ul>
<ul style="list-style-type: none"> <li>• 7.1+2 channel High Definition Audio Codec</li> <li>• All DACs Support 192k/96k/48k/44.1kHz DAC sample rate</li> <li>• Software selectable 2.5V/3.75V VREFOUT</li> <li>• Meets Microsoft WHQL/WLP 2.x audio requirements</li> <li>• Direct Sound 3D™ compatible</li> </ul>
<ul style="list-style-type: none"> <li>• 5.1 Channel High Definition Audio Codec</li> <li>• ADCs support 44.1k/48k/96kHz sample rate</li> <li>• Meets Microsoft WLP 3.08 Vista premium and mobile PCs audio requirements</li> <li>• Direct Sound 3D™ compatible</li> </ul>

## Onboard LAN (optional)

This motherboard may support either of the following LAN chipsets:

<ul style="list-style-type: none"> <li>• Integrated Fast Ethernet Controller for PCI Express™ Applications</li> <li>• Integrated 10/100 transceiver</li> <li>• Wake-on-LAN and remote wake-up support</li> </ul>
<ul style="list-style-type: none"> <li>• Integrated Gigabit Ethernet Controller for PCI Express™ Applications</li> <li>• Integrated 10/100/1000 transceiver</li> <li>• Wake-on-LAN and remote wake-up support</li> </ul>

## Expansion Options

The motherboard comes with the following expansion options:

- One PCI Express x 16 slot for Graphic Interface
- One PCI Express x1 Slot
- Two 32-bit PCI v2.3 compliant slots
- Six 7-pin SATA connectors

This motherboard supports Ultra DMA bus mastering with transfer rates of 133/100/66/33 Mb/s.

## Integrated I/O

The motherboard has a full set of I/O ports and connectors:

- Two PS/2 ports for mouse and keyboard
- One DVI port
- One VGA port
- One Parallel port
- Four USB ports
- One LAN port
- Audio jacks for microphone, line-in and 6/8-channel (optional) line-out

Introducing the Motherboard

## BIOS Firmware

This motherboard uses AMI BIOS that enables users to configure many system features including the following:

- Power management
- Wake-up alarms
- CPU parameters
- CPU and memory timing


The firmware can also be used to set parameters for different processor clock speeds.



*1. Some hardware specifications and software items are subject to change without prior notice.*

*2. Due to chipset limitation, we recommend that motherboard be operated in the ambient between 0 and 50 °C.*

## Motherboard Components

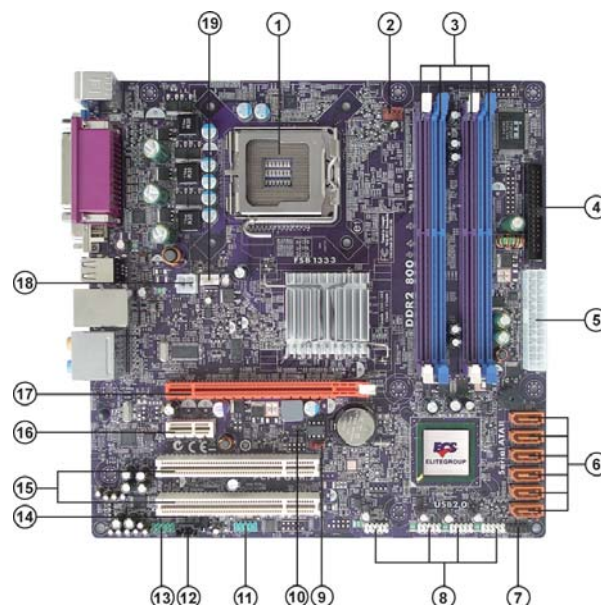

**Table of Motherboard Components**

LABEL	COMPONENTS
1. CPU Socket	LGA775 socket for Intel® Yorkfield/Wolfdale/Core™ 2 Quad/ Core™ 2 Duo/Pentium® Dual-Core (E21XX series)/ Celeron® Dual-Core/Celeron® 4xx series CPUs
2. CPU_FAN	CPU cooling fan connector
3. DIMM1~4	240-pin DDR2 SDRAM slots
4. FDD1	Floppy disk drive connector
5. ATX_POWER1	Standard 24-pin ATX power connector
6. SATA1~6	Serial ATA connectors
7. F_PANEL	Front panel switch/LED header
8. F_USB1~4	Front Panel USB headers
9. CLR_CMOS	Clear CMOS jumper
10. BIOS_WP	BIOS flash protect header
11. COM1	Onboard serial port header
12. CD_IN	Analog audio input connector
13. F_AUDIO	Front panel audio header
14. SPDIF_OUT	SPDIF out header
15. PCI1~2	32-bit add-on card slots
16. PCIEX1	PCI Express x1 slot
17. PCIEX1	PCI Express x16 graphics card slot
18. ATX12V1	4-pin +12V power connector
19. SYS_FAN	System cooling fan connector

This concludes Chapter 1. The next chapter explains how to install the motherboard.

## Introducing the Motherboard

*Memo*

Introducing the Motherboard

## Chapter 2

### *Installing the Motherboard*

---

#### **Safety Precautions**

- Follow these safety precautions when installing the motherboard
- Wear a grounding strap attached to a grounded device to avoid damage from static electricity
- Discharge static electricity by touching the metal case of a safely grounded object before working on the motherboard
- Leave components in the static-proof bags they came in
- Hold all circuit boards by the edges. Do not bend circuit boards

#### **Choosing a Computer Case**

There are many types of computer cases on the market. The motherboard complies with the specifications for the Micro ATX system case. First, some features on the motherboard are implemented by cabling connectors on the motherboard to indicators and switches on the system case. Make sure that your case supports all the features required. Secondly, this motherboard supports two enhanced IDE drives. Make sure that your case has sufficient power and space for all drives that you intend to install.

Most cases have a choice of I/O templates in the rear panel. Make sure that the I/O template in the case matches the I/O ports installed on the rear edge of the motherboard.


This motherboard carries a Micro ATX form factor of 244 x 244 mm. Choose a case that accommodates this form factor.

#### **Installing the Motherboard in a Case**

Refer to the following illustration and instructions for installing the motherboard in a case.

Most system cases have mounting brackets installed in the case, which correspond the holes in the motherboard. Place the motherboard over the mounting brackets and secure the motherboard onto the mounting brackets with screws.

Ensure that your case has an I/O template that supports the I/O ports and expansion slots on your motherboard.

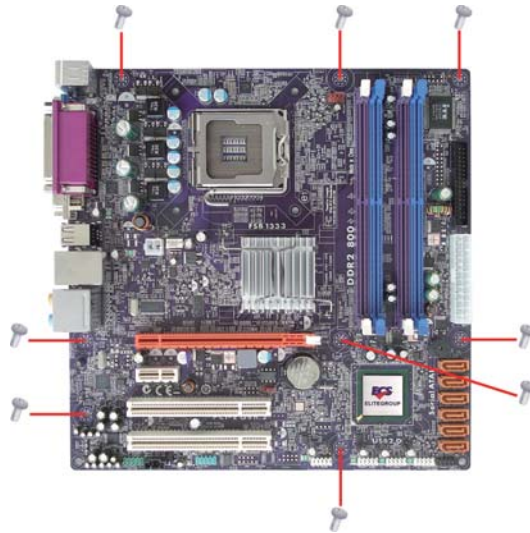

*Do not over-tighten the screws as this can stress the motherboard.*

## Checking Jumper Settings

This section explains how to set jumpers for correct configuration of the motherboard.

### Setting Jumpers

Use the motherboard jumpers to set system configuration options. Jumpers with more than one pin are numbered. When setting the jumpers, ensure that the jumper caps are placed on the correct pins.

The illustrations show a 2-pin jumper. When the jumper cap is placed on both pins, the jumper is **SHORT**. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is **OPEN**.




**SHORT**



**OPEN**


This illustration shows a 3-pin jumper. Pins 1 and 2 are **SHORT**.

 



## Installing the Motherboard

### Checking Jumper Settings

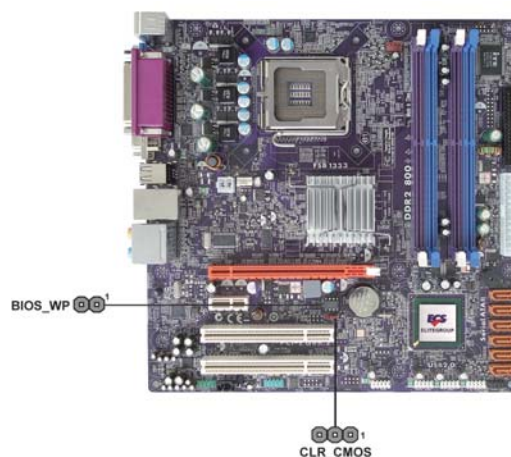The following illustration shows the location of the motherboard jumpers. Pin 1 is labeled.



### Jumper Settings

Jumper	Type	Description	Setting (default)	
<b>CLR_CMOS</b>	3-pin	CLEAR CMOS	1-2: NORMAL 2-3: CLEAR Before clearing the CMOS, make sure to turn off the system.	 1 CLR_CMOS
<b>BIOS_WP</b>	2-pin	BIOS PROTECT	OPEN: WRITE UNPROTECT SHORT: WRITE PROTECT	 1 BIOS_WP



To avoid the system instability after clearing CMOS, we recommend users to enter the main BIOS setting page to “Load Optimized Defaults” and then “Save & Exit Setup”.

## Installing the Motherboard

## Installing Hardware

### Installing the Processor



*Caution: When installing a CPU heatsink and cooling fan make sure that you **DO NOT** scratch the motherboard or any of the surface-mount resistors with the clip of the cooling fan. If the clip of the cooling fan scrapes across the motherboard, you may cause serious damage to the motherboard or its components.*

*On most motherboards, there are small surface-mount resistors near the processor socket, which may be damaged if the cooling fan is carelessly installed.*

*Avoid using cooling fans with sharp edges on the fan casing and the clips. Also, install the cooling fan in a well-lit work area so that you can clearly see the motherboard and processor socket.*

### Before installing the Processor

This motherboard automatically determines the CPU clock frequency and system bus frequency for the processor. You may be able to change the settings in the system Setup Utility. We strongly recommend that you do not over-clock processors or other components to run faster than their rated speed.



*Warning:*

- 1. Over-clocking components can adversely affect the reliability of the system and introduce errors into your system. Over-clocking can permanently damage the motherboard by generating excess heat in components that are run beyond the rated limits.*
- 2. Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.*

This motherboard has an LGA775 socket. When choosing a processor, consider the performance requirements of the system. Performance is based on the processor design, the clock speed and system bus frequency of the processor, and the quantity of internal cache memory and external cache memory.

## Installing the Motherboard



## CPU Installation Procedure

The following illustration shows CPU installation components.

- A. Read and follow the instructions shown on the sticker on the CPU cap.
- B. Unload the cap
  - Use thumb & forefinger to hold the lifting tab of the cap.
  - Lift the cap up and remove the cap completely from the socket.
- C. Open the load plate
  - Use thumb & forefinger to hold the hook of the lever, pushing down and pulling aside unlock it.
  - Lift up the lever.
  - Use thumb to open the load plate. Be careful not to touch the contacts.
- D. Install the CPU on the socket
  - Orientate CPU package to the socket. Make sure you match triangle marker to pin 1 location.
- E. Close the load plate
  - Slightly push down the load plate onto the tongue side, and hook the lever.
  - CPU is locked completely.
- F. Apply thermal grease on top of the CPU.
- G. Fasten the cooling fan supporting base onto the CPU socket on the motherboard.
- H. Make sure the CPU fan is plugged to the CPU fan connector. Please refer to the CPU cooling fan user's manual for more detail installation procedure.



1. To achieve better airflow rates and heat dissipation, we suggest that you use a high quality fan with 3800 rpm at least. CPU fan and heatsink installation procedures may vary with the type of CPU fan/heatsink supplied. The form and size of fan/heatsink may also vary.
2. DO NOT remove the CPU cap from the socket before installing a CPU.
3. Return Material Authorization (RMA) requests will be accepted only if the motherboard comes with the cap on the LGA775 socket.

## Installing the Motherboard

### Installing Memory Modules

This motherboard accommodates four memory modules. It can support four 240-pin DDR2 800/667. The total memory capacity is 16 GB.

#### DDR2 SDRAM memory module table

Memory module	Memory Bus
<i>DDR2 667</i>	<i>333 MHz</i>
<i>DDR2 800</i>	<i>400 MHz</i>

You must install at least one module in any of the four slots. Each module can be installed with 4 GB of memory; total memory capacity is 16 GB.

The four DDR2 memory sockets (DIMM1, DIMM2, DIMM3, DIMM4) are divided into two channels and each channel has two memory sockets as following:

►► Channel 0: DIMM1, DIMM2

►► Channel 1: DIMM3, DIMM4



*Do not remove any memory module from its antistatic packaging until you are ready to install it on the motherboard. Handle the modules only by their edges. Do not touch the components or metal parts. Always wear a grounding strap when you handle the modules.*

### Installation Procedure

Refer to the following to install the memory modules.

- 1 This motherboard supports unbuffered DDR2 SDRAM .
- 2 Push the latches on each side of the DIMM slot down.
- 3 Align the memory module with the slot. The DIMM slots are keyed with notches and the DIMMs are keyed with cutouts so that they can only be installed correctly.
- 4 Check that the cutouts on the DIMM module edge connector match the notches in the DIMM slot.
- 5 Install the DIMM module into the slot and press it firmly down until it seats correctly. The slot latches are levered upwards and latch on to the edges of the DIMM.
- 6 Install any remaining DIMM modules.



Installing the Motherboard

**Table A: DDR2 (memory module) QVL (Qualified Vendor List)**

The following DDR2 800/667 memory modules and combination have been tested and qualified for use with this motherboard.

Type	Size	Vendor	Module Name
DDR2 667	256 MB	Infineon	HYS64T325001HU-3-A HYB18T256
		Ramaxel	5NB31 D9DCG
	512 MB	A-DATA	AD29608A88-3EG
		A-DATA	M2OAD5G3H31661C52
		Apacer	78.91G92.9K5
		APOGEE	AU51082-667P005
		CORSAIR	Corsair K4T5108QC
		CORSAIR	64M8CFE PS1000545
		CORSAIR	VALUESELECT 32M8CEC
		GEIL	GL2L64M088BA18W
		Infinity	0547W64M8 PC5300
		Micron	MT4HTF6464AY-667E1
		PSC	AL6E8E63J-6E1
		Ramaxel	5LB31 D9DCL
		SAMSUNG	K4T51083QC
		SyncMAX	04400WB01 R050008A
		TwinMOS	TMM6208G8M30B
		TwinMOS	8D23JK-TT
		Transcend	SEL520ZCE6 K4T51083QC
		Transcend	JetRam J12Q3AB-6
	1 GB	APACER	Elpida 1GB AM4B5708GEWS7E-0637F
		APACER	AM4B5708GQJS7E0631F
		Apacer	78.01G90.9K5
		A-DATA	M2OAD5G3I41761C52
		APOGEE	AU1G082-667P005
		Infineon	HYB18T512800BF3S
		Infineon	Aeneon AET93E30RB-0650 1GB
		Micron	MT8HTF12864AY-667E1
		PSC	AL7E8E63B-6E1T
		PSC	AL7E8F63J-6E1
		PSC	AL7E8F73C-6E1
		Twinmos	8D23KK-TT
	2 GB	Aeneon	AET860UD00-30DB08X
		Apacer	78.A1G90.9K4
		Hynix	HYMP125U64AP8-Y5-AB-A
		LeadMax	LeadMax LD5PS1G831
		PSC	AL8E8F73C-6E1
		Qimonda	HYS64T256020EU-3S- C2
DDR2 800	512 MB	A-DATA	AD29608A8A-25EG
		A-DATA	M2OAD6G3H31601E53
		Elpida (Kingston)	E5108AJBG-8E-E
		Infineon	HYS64T64020HU-2.5-A HYB18T256 800AF25
		Infinity	04751208CZ5U2D
		Kingston	KHX6400D2ULK2
		Kingston	KHX6400D2ULK2/1G
		Kingston	KVR800D2N5/512
		Micron	6WD22 D9GKX
		Micron	MT8HTF6464AY-80ED4
		Sync MAX	U538H8G090HL
		APACER	AM4B5708BPS8E0634E
	1 GB	APACER	AM4B5708JQS8E0749D
		APACER	AM4B5808CQS8E0749D
		Apacer	78.01GA0.9K5
		A-DATA	VD29608A8D-25EG-E0722
		Aeneon	AET760UD00-25DC08X
		CORSAIR	CM2X1024-6400
		CORSAIR	CM2X1024-6400PRO
		Geil	GL2L64M088BA18H
		Hexon	NP18T648512F-2.5
		Infinity	04701G16CZ5U2G

Installing the Motherboard


Type	Size	Vendor	Module Name
DDR2 800	1 GB	NPC	NCPT7AUDR-25M48
		Kingston	KHX6400D2ULK2/2G
		Kingston	KVR800D2N5/1G
		Ramaxel	E5108AHSE-8E-E 0705098L1
		Samsung	ZCE7 K4T510830E
		Transcend	TQ123PGF8T0709
	2 GB	UMAX	U2S12D30TP-8E
		Aeneon	AET03R25DC 0732
		Aeneon	AET860UD00-25DC08X
		Apacer	AM4B5808CQJS8E 0747D
		Apacer	78.A1GA0.9K4
		A-DATA	RED A-DATA M2OMI6H3J4720L1C5Z
		CORSAIR	CM2X2048-6400C5
		Micron	7QEIID9HNP
		Micron	MT16HTF25664AY-800E1
		PSC	A3R1GE3CFF 734MAAOE
		PSC	AL8E8F73C-8E1
		Qimonda	HYB18T1G800C2F-25F 0744
		Qimonda	HYS64T256020EU-25F-C2
		Samsung	HCF7 K4T1G084QQ

Installing the Motherboard

## Expansion Slots

### Installing Add-on Cards

The slots on this motherboard are designed to hold expansion cards and connect them to the system bus. Expansion slots are a means of adding or enhancing the motherboard's features and capabilities. With these efficient facilities, you can increase the motherboard's capabilities by adding hardware that performs tasks that are not

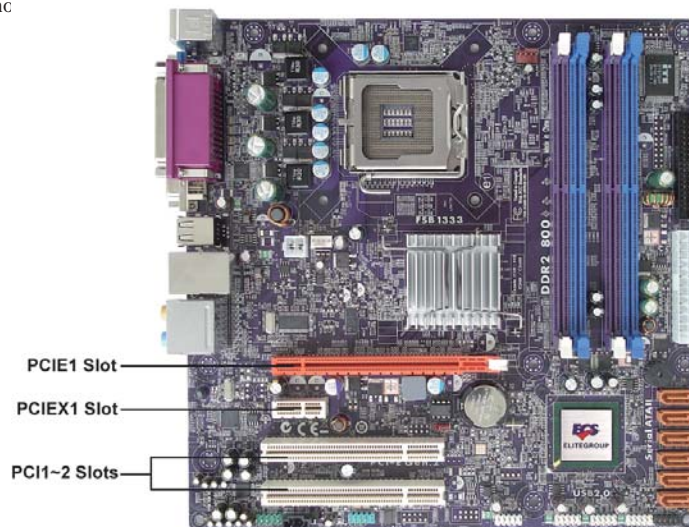

- PCIe1 Slot** The PCI Express x16 slot is used to install an external PCI Express graphics card that is fully compliant to the PCI Express Base Specification revision 2.0.
- PCIEX1 Slot** The PCI Express x1 slots are fully compliant to the PCI Express Base Specification revision 1.1.
- PCI1~2 Slots** This motherboard is equipped with two standard PCI slots. PCI stands for Peripheral Component Interconnect and is a bus standard for expansion cards, which for the most part, is a supplement of the older ISA bus standard. The PCI slots on this board are PCI v2.3 compliant.




*Before installing an add-on card, check the documentation for the card carefully. If the card is not Plug and Play, you may have to manually configure the card before installation.*

## Installing the Motherboard

Follow these instructions to install an add-on card:


- 1 Remove a blanking plate from the system case corresponding to the slot you are going to use.
- 2 Install the edge connector of the add-on card into the expansion slot. Ensure that the edge connector is correctly seated in the slot.
- 3 Secure the metal bracket of the card to the system case with a screw.

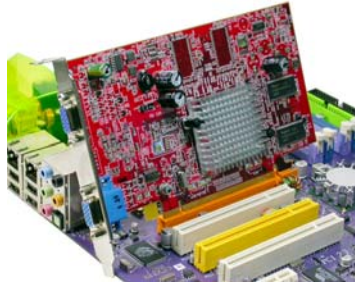

*For some add-on cards, for example graphics adapters and network adapters, you have to install drivers and software before you can begin using the add-on card.*

Connecting Optional Devices

Refer to the following for information on connecting the motherboard's optional devices:

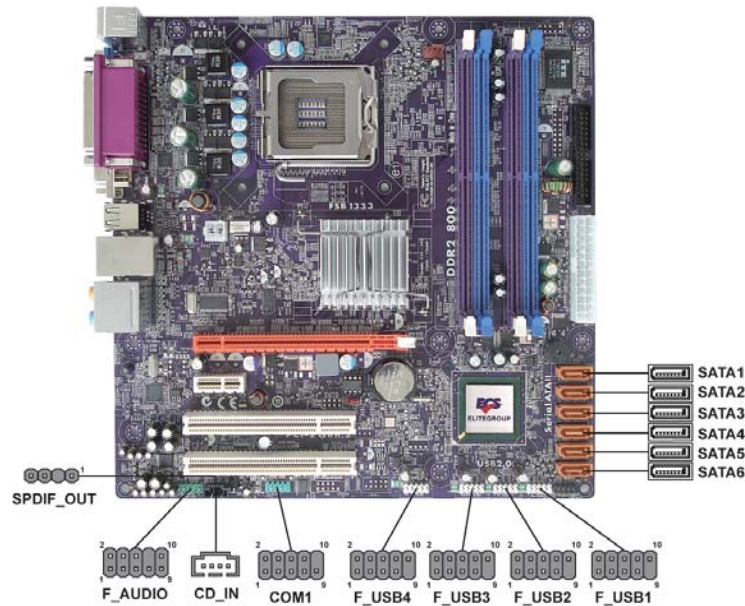

F\_AUDIO: Front Panel Audio header

This header allows the user to install auxiliary front-oriented microphone and line-out ports for easier access.

Pin	Signal Name	Pin	Signal Name
1	PORT 1L	2	AUD_GND
3	PORT 1R	4	PRESENCE#
5	PORT 2R	6	SENSE1_RETURN
7	SENSE_SEND	8	KEY
9	PORT 2L	10	SENSE2_RETURN

SPDIF\_OUT: SPDIF out header

This is an optional header that provides an S/PDIF (Sony/Philips Digital Interface) output to digital multimedia device through optical fiber or coaxial connector.

Pin	Signal Name	Function
1	+5VA	5V analog Power
2	Key	No pin
3	SPDIF	SPDIF digital output
4	GND	Ground

Installing the Motherboard

**CD\_IN: Analog Audio Input connector**

Pin	Signal Name	Function
1	CD_L	CD In left channel
2	GND	Ground
3	GND	Ground
4	CD_R	CD In right channel

**F\_USB1~4: Front Panel USB headers**

The motherboard has four USB ports installed on the rear edge I/O port array. Additionally, some computer cases have USB ports at the front of the case. If you have this kind of case, use auxiliary USB connector to connect the front-mounted ports to the motherboard.

Pin	Signal Name	Function
1	USBPWR	Front Panel USB Power
2	USBPWR	Front Panel USB Power
3	USB_FP_P0-	USB Port 0 Negative Signal
4	USB_FP_P1-	USB Port 1 Negative Signal
5	USB_FP_P0+	USB Port 0 Positive Signal
6	USB_FP_P1+	USB Port 1 Positive Signal
7	GND	Ground
8	GND	Ground
9	Key	No pin
10	NC	Not connected



*Please make sure that the USB cable has the same pin assignment as indicated above. A different pin assignment may cause damage or system hang-up.*

**SATA1~6: Serial ATA connectors**

These connectors are used to support the new Serial ATA devices for the highest data transfer rates (3.0 Gb/s), simpler disk drive cabling and easier PC assembly. It eliminates limitations of the current Parallel ATA interface. But maintains register compatibility and software compatibility with Parallel ATA.

Pin	Signal Name	Pin	Signal Name
1	Ground	2	TX+
3	TX-	4	Ground
5	RX-	6	RX+
7	Ground	-	-



**COM1: Onboard serial port header**

Connect a serial port extension bracket to this header to add a second serial port to your system.

Pin	Signal Name	Function
1	DCDB	Data Carrier Detect
2	SINB	Serial Input
3	SOUTB	UART B Serial Output
4	DTRB	UART B Data Terminal Ready
5	GND	Ground
6	DSRB	Data Set Ready
7	RTSB	UART B Request to Send
8	CTSB	Clear to Send
9	RI	Ring Indicator
10	Key	No pin

## ***Installing a SATA Hard Drive***

### **About SATA Connectors**

Your motherboard features six SATA connectors supporting a total of six drives. SATA refers to Serial ATA (Advanced Technology Attachment) is the standard interface for the IDE hard drives which are currently used in most PCs. These connectors are well designed and will only fit in one orientation. Locate the SATA connectors on the motherboard and follow the illustration below to install the SATA hard drives.

### **Installing Serial ATA Hard Drives**

To install the Serial ATA (SATA) hard drives, use the SATA cable that supports the Serial ATA protocol. This SATA cable comes with an SATA power cable. You can connect either end of the SATA cable to the SATA hard drive or the connector on the motherboard.



**SATA cable (optional)**



**SATA power cable (optional)**

Refer to the illustration below for proper installation:

- 1 Attach either cable end to the connector on the motherboard.
- 2 Attach the other cable end to the SATA hard drive.
- 3 Attach the SATA power cable to the SATA hard drive and connect the other end to the power supply.



*This motherboard supports the “Hot-Plug” function.*

Installing the Motherboard

### *Installing a Floppy Diskette Drive*

#### **FDD1: Floppy Disk Connector**

Connect the single end of the floppy connector to the onboard floppy connector firstly, and then connect the remaining plugs on the other end to the floppy drives correspondingly.




*You must orient the cable connector so that the pin 1 (color) edge of the cable corresponds to the pin 1 of the I/O port connector.*



Installing the Motherboard

## Connecting I/O Devices

The backplane of the motherboard has the following I/O ports:

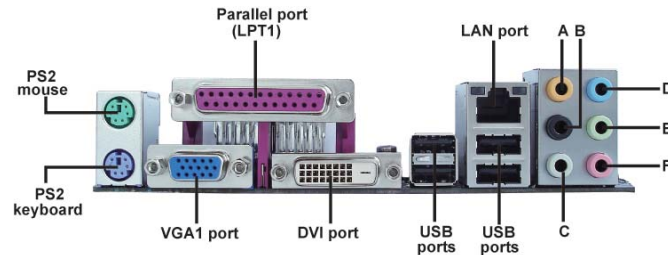

**PS2 Mouse** Use the upper PS/2 port to connect a PS/2 pointing device.

**PS2 Keyboard** Use the lower PS/2 port to connect a PS/2 keyboard.

**Parallel Port (LPT1) (Optional)** Use LPT to connect printers or other parallel communications devices.

**DVI Port** Use the DVI port to connect the monitor.

**VGA1 Port** Connect your monitor to the VGA port.

**LAN Port** Connect an RJ-45 jack to the LAN port to connect your computer to the Network.


**USB Ports** Use the USB ports to connect USB devices.

**Audio Ports (Optional)** Use the audio jacks to connect audio devices. The D port is for stereo line-in signal, while the F port is for microphone in signal. This motherboard supports 8-channel audio devices that correspond to the A, B, C, and E port respectively. In addition, all of the 3 ports, B, C, and E provide users with both right & left channels individually. Users please refer to the following note for specific port function definition.



A: Center & Woofer	D: Line-in
B: Back Surround	E: Front Out
C: Side Surround	F: Mic_in Rear

 *The above port definition can be changed to audio input or audio output by changing the driver utility setting.*




Use the three audio ports to connect audio devices. The first jack is for stereo line-in signal. The second jack is for stereo line-out signal. The third jack is for microphone.

## Installing the Motherboard

## Connecting Case Components


After you have installed the motherboard into a case, you can begin connecting the motherboard components. Refer to the following:

- 1 Connect the CPU cooling fan cable to **CPU\_FAN**.
- 2 Connect the system cooling fan connector to **SYS\_FAN**.
- 3 Connect the case switches and indicator LEDs to the **F\_PANEL**.
- 4 Connect the standard power supply connector to **ATX\_POWER1**.
- 5 Connect the auxiliary case power supply connector to **ATX12V1**.

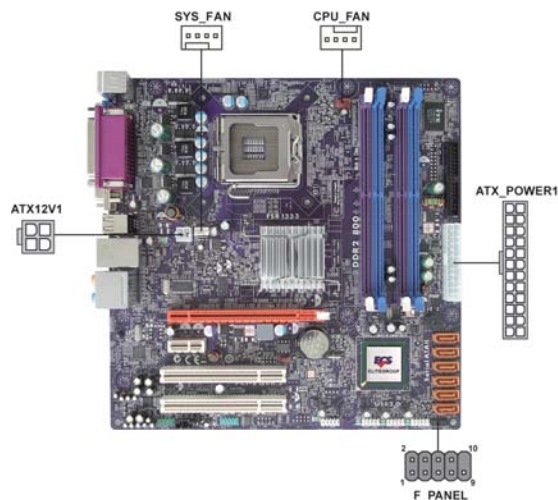

### Connecting 24-pin power cable

The ATX 24-pin connector allows you to connect to ATX v2.x power supply.

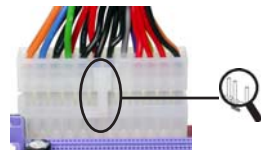


*24-pin power cable*

With ATX v2.x power supply, users please note that when installing 24-pin power cable, the latches of power cable and the ATX\_POWER1 match perfectly.



### Connecting 4-pin power cable

The ATX12V power connector is used to provide power to the CPU.

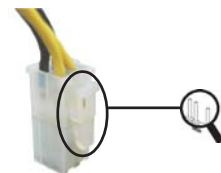

*4-pin power cable*

When installing 4-pin power cable, the latches of power cable and the ATX12V1 match perfectly.

Installing the Motherboard

**CPU\_FANS/SYS\_FAN: FAN Power Connector**

Pin	Signal Name	Function
1	GND	System Ground
2	+12V	Power +12V
3	Sense	Sensor
4	PWM	PWM



*Users please note that the fan connector supports the CPU cooling fan of 1.1A ~ 2.2A (26.4W max) at +12V.*

**ATX\_POWER1: ATX 24-pin Power Connector**


Pin	Signal Name	Pin	Signal Name
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	Ground	15	Ground
4	+5V	16	PS_ON
5	Ground	17	Ground
6	+5V	18	Ground
7	Ground	19	Ground
8	PWRGD	20	-5V
9	+5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	Ground

**ATX12V1: ATX 12V Power Connector**

Pin	Signal Name
1	Ground
2	Ground
3	+12V
4	+12V

### Front Panel Header

The front panel header (F\_PANEL) provides a standard set of switch and LED headers commonly found on ATX or Micro ATX cases. Refer to the table below for information:

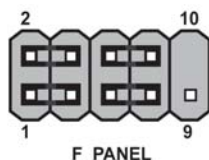

Pin	Signal	Function	Pin	Signal	Function
1	HD_LED_P	Hard disk LED(+)	2	FP PWR/SLP	*MSG LED(+)
3	HD_LED_N	Hard disk LED(-)	4	FP PWR/SLP	*MSG LED(-)
5	RST_SW_N	Reset Switch(-)	6	PWR_SW_P	Power Switch(+)
7	RST_SW_P	Reset Switch(+)	8	PWR_SW_N	Power Switch(-)
9	RSVD	Reserved	10	Key	No pin

\* MSG LED (dual color or single color)

### Hard Drive Activity LED

Connecting pins 1 and 3 to a front panel mounted LED provides visual indication that data is being read from or written to the hard drive. For the LED to function properly, an IDE drive should be connected to the onboard IDE interface. The LED will also show activity for devices connected to the SCSI (hard drive activity LED) connector.

### Power/Sleep/Message waiting LED

Connecting pins 2 and 4 to a single or dual-color, front panel mounted LED provides power on/off, sleep, and message waiting indication.

### Reset Switch

Supporting the reset function requires connecting pin 5 and 7 to a momentary-contact switch that is normally open. When the switch is closed, the board resets and runs POST.

### Power Switch

Supporting the power on/off function requires connecting pins 6 and 8 to a momentary-contact switch that is normally open. The switch should maintain contact for at least 50 ms to signal the power supply to switch on or off. The time requirement is due to internal de-bounce circuitry. After receiving a power on/off signal, at least two seconds elapses before the power supply recognizes another on/off signal.

This concludes Chapter 2. The next chapter covers the BIOS.

## Installing the Motherboard

## *Memo*

Installing the Motherboard



## Chapter 3

### *Using BIOS*

---

#### **About the Setup Utility**

The computer uses the latest “American Megatrends Inc.” BIOS with support for Windows Plug and Play. The CMOS chip on the motherboard contains the ROM setup instructions for configuring the motherboard BIOS.

The BIOS (Basic Input and Output System) Setup Utility displays the system’s configuration status and provides you with options to set system parameters. The parameters are stored in battery-backed-up CMOS RAM that saves this information when the power is turned off. When the system is turned back on, the system is configured with the values you stored in CMOS.

The BIOS Setup Utility enables you to configure:

- Hard drives, diskette drives and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power Management features

The settings made in the Setup Utility affect how the computer performs. Before using the Setup Utility, ensure that you understand the Setup Utility options.

This chapter provides explanations for Setup Utility options.

#### ***The Standard Configuration***

A standard configuration has already been set in the Setup Utility. However, we recommend that you read this chapter in case you need to make any changes in the future.

This Setup Utility should be used:

- when changing the system configuration
- when a configuration error is detected and you are prompted to make changes to the Setup Utility
- when trying to resolve IRQ conflicts
- when making changes to the Power Management configuration
- when changing the password or making other changes to the Security Setup

#### ***Entering the Setup Utility***

When you power on the system, BIOS enters the Power-On Self Test (POST) routines. POST is a series of built-in diagnostics performed by the BIOS. After the POST routines are completed, the following message appears:

**Press DEL to enter SETUP**

Introducing the Motherboard

Press the delete key to access the BIOS Setup Utility.

CMOS Setup Utility -- Copyright (C) 1985-2008, American Megatrends, Inc.

<ul style="list-style-type: none"> <li>▶ Standard CMOS Setup</li> <li>▶ Advanced Setup</li> <li>▶ Advanced Chipset Setup</li> <li>▶ Integrated Peripherals</li> <li>▶ Power Management Setup</li> <li>▶ PCI/PnP Setup</li> <li>▶ PC Health Status</li> </ul>	<ul style="list-style-type: none"> <li>▶ Frequency/Voltage Control</li> <li>Load Default Settings</li> <li>▶ Supervisor Password</li> <li>▶ User Password</li> <li>Save &amp; Exit Setup</li> <li>Exit Without Saving</li> </ul>
<p>↑↓ → ← : Move   Enter : Select   +/- : Value   F10: Save   ESC: Exit</p> <p>F1: General Help   F9: Load Default Settings</p>	
<p>v02.61 (C) Copyright 1985-2008, American Megatrends, Inc.</p>	

## Using BIOS

When you start the Setup Utility, the main menu appears. The main menu of the Setup Utility displays a list of the options that are available. A highlight indicates which option is currently selected. Use the cursor arrow keys to move the highlight to other options. When an option is highlighted, execute the option by pressing <Enter>.

Some options lead to pop-up dialog boxes that prompt you to verify that you wish to execute that option. Other options lead to dialog boxes that prompt you for information.

Some options (marked with a triangle ▶) lead to submenus that enable you to change the values for the option. Use the cursor arrow keys to scroll through the items in the submenu.

In this manual, default values are enclosed in parenthesis. Submenu items are denoted by a triangle ▶.



*The default BIOS setting for this motherboard applies for most conditions with optimum performance. It is not suggested to change the default values in the BIOS setup and the manufacture takes no responsibility to any damage caused by changing the BIOS settings.*

## BIOS Navigation Keys

The BIOS navigation keys are listed below:

KEY	FUNCTION
<b>ESC</b>	Exits the current menu
↑↓ → ←	Scrolls through the items on a menu
<b>+/-/PU/PD</b>	Modifies the selected field's values
<b>Enter</b>	Select
<b>F9</b>	Loads an optimized setting for better performance
<b>F10</b>	Saves the current configuration and exits setup
<b>F1</b>	Displays a screen that describes all key functions

Introducing the Motherboard



For the purpose of better product maintenance, the manufacture reserves the right to change the BIOS items presented in this manual. The BIOS setup screens shown in this chapter are for reference only and may differ from the actual BIOS. Please visit the manufacture's website for updated manual.

### Standard CMOS Setup

This option displays basic information about your system.

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
Standard CMOS Setup

Date	Wed 06/18/2008	Help Item
Time Alarm (hh:mm:ss)	00:01:55	
► SATA1	Not Detected	User [Enter], [TAB] or [SHIFT-TAB] to select a field.  Use [+] or [-] to configure system Date.
► SATA2	Hard Disk	
► SATA3	Not Detected	
► SATA4	Not Detected	
► SATA5	Not Detected	
► SATA6	Not Detected	
IDE BusMaster	Enabled	
Drive A:	1.44 MB 3 1/2"	

↑↓ → ←: Move Enter: Select +/-: Value F10: Save ESC: Exit  
F1: General Help F9: Load Default Settings

### Date & Time

The Date and Time items show the current date and time on the computer. If you are running a Windows OS, these items are automatically updated whenever you make changes to the Windows Date and Time Properties utility.

### ► SATA 1~6

Your computer has one IDE channel which can be installed with one or two devices (Master and Slave). In addition, this motherboard supports six SATA channels and each channel allows one SATA device to be installed. Use these items to configure each device on the IDE channel.

CMOS SETUP UTILITY - Copyright (C) 1985-2008, American Megatrends, Inc.  
SATA1

SATA1		Help Item
Device : Not Detected		
Type	Auto	Select the type of device connected to the system.
LBA/Large Mode	Auto	
Block (Multi-Sector Transfer)	Auto	
PIO Mode	Auto	
DMA Mode	Auto	
S.M.A.R.T	Auto	
32Bit Data Transfer	Enabled	

↑↓ → ←: Move Enter: Select +/-: Value F10: Save ESC: Exit  
F1: General Help F9: Load Default Settings

Introducing the Motherboard

**Type (Auto)**

Use this item to configure the type of the IDE device that you specify. If the feature is enabled, it will enhance hard disk performance by reading or writing more data during each transfer.

**LBA/Large Mode (Auto)**

Use this item to set the LBA/Large mode to enhance hard disk performance by optimizing the area the hard disk is visited each time.

**Block (Multi-Sector Transfer) (Auto)**

If the feature is enabled, it will enhance hard disk performance by reading or writing more data during each transfer.

**PIO Mode (Auto)**

Use this item to set the PIO mode to enhance hard disk performance by optimizing the hard disk timing.

**DMA Mode (Auto)**

DMA capability allows user to improve the transfer-speed and data-integrity for compatible IDE devices.

**S.M.A.R.T. (Auto)**

The S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) system is a diagnostics technology that monitors and predicts device performance. S.M.A.R.T. software resides on both the disk drive and the host computer.

**32Bit Data Transfer (Enabled)**

Use this item to set the onboard SATA-IDE channel to be disabled, IDE, or RAID.

Press <Esc> to return to the Standard CMOS Setup page.

**IDE BusMaster (Enabled)**

This item enables or disables the DMA under DOS mode. We recommend you to leave this item at the default value.

**Drive A (1.44 MB 3 $\frac{1}{2}$ " )**

This item defines the characteristics of any diskette drive attached to the system. You can connect one or two diskette drives.

Press <Esc> to return to the main menu setting page.

## Advanced Setup

This page sets up more advanced information about your system. Handle this page with caution. Any changes can affect the operation of your computer.

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
Advanced Setup

Thermal Management	Enabled	Help Item
TM Status	TM1/TM2	
Limit CPUID MaxVal	Disabled	
Enhanced Halt (C1E)	Enabled	For the processor its CPUTD belows 0F41h. TM2 only can be enable under below settings.
Intel XD Bit	Enabled	1.Freq.>=3.6GHz FSB800
Intel EIST	Enabled	2.Freq.>=2.8GHz FSB533
Intel Virtualization Technol	Enabled	
Quick Power on Self Test	Enabled	
Boot Up Numlock Status	On	
APIC Mode	Enabled	
1st Boot Device	Hard Disk Drive	
2nd Boot Device	CD/DVD	
3rd Boot Device	1st FLOPPY DRIVE	
► Hard Disk Drives	Press Enter	
► Removable Drives	Press Enter	
Boot Other Device	Yes	

↑↓ → ←: Move    Enter: Select    +/-: Value    F10: Save    ESC: Exit  
F1: General Help    F9: Load Default Settings

### Thermal Management/TM Status (Enabled/TM1/TM2)

These items display CPU's temperature and enable you to set a safe temperature to Prescott CPU.

### Limit CPUID MaxVal (Disabled)

This item can support Prescott CPUs for old OS. Users please note that under NT 4.0, it must be set "Enabled", while under WinXP, it must be set "Disabled".

### Enhanced Halt (C1E) (Enabled)

This item enables or disables enhanced halt (C1E).

### Intel XD Bit (Enabled)

This item allows users to enable or disable the Intel XD bit.

### Intel EIST (Enabled)

This item allows users to enable or disable the EIST (Enhanced Intel SpeedStep technology).

### Intel Virtualization Technol (Enabled)

Hardware Virtualization Technology enables processor feature for running multiple simultaneous Virtual Machines allowing specialized software applications to run in full isolation of each other.

### Quick Power on Self Test (Enabled)

Enable this item to shorten the power on testing (POST) and have your system start up faster. You might like to enable this item after you are confident that your system hardware is operating smoothly.

### Boot Up Numlock Status (On)

This item defines if the keyboard Num Lock key is active when your system is started.

Introducing the Motherboard

**APIC Mode (Enabled)**

This item allows you to enable or disable the APCI (Advanced Programmable Interrupt Controller) mode. APIC provides symmetric multi-processing (SMP) for systems, allowing support for up to 60 processors.

**1st/2nd/3rd Boot Device (Hard Disk Drive/CD/DVD/1st FLOPPY DRIVE)**

Use this item to determine the device order the computer used to look for an operating system to load at start-up time. The devices showed here will be different depending on the exact devices installed on your motherboard.

**► Hard Disk Drives (Press Enter)**

Scroll to this item and press <Enter> to view the following screen:

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
Hard Disk Drives

Hard Disk Drives		Help Item
1st Drive	WDC WD1600JS-22NCB1	Specifies the boot sequence from the available devices.

↑↓→←: Move    Enter: Select    +/-: Value    F10: Save    ESC: Exit  
F1: General Help    F9: Load Default Settings

Press <Esc> to return to the Advanced Setup page.

**► Removable Drives (Press Enter)**

Scroll to this item and press <Enter> to view the following screen:

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
Removable Drives

Removable Drives		Help Item
1st Drive	1st FLOPPY DRIVE	Specifies the boot sequence from the available devices.

↑↓→←: Move    Enter: Select    +/-: Value    F10: Save    ESC: Exit  
F1: General Help    F9: Load Default Settings

**Boot Other Device (Yes)**

When enabled, the system searches all other possible locations for an operating system if it fails to find one in the devices specified under the First, Second and Third boot devices.

Press <Esc> to return to the main menu setting page.

### Advanced Chipset Setup

This page sets up more advanced information about your system. Handle this page with caution. Any changes can affect the operation of your computer.

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
Advanced Chipset Setup

DRAM Frequency	Auto	Help Item
Configure DRAM Timing by SPD	Enabled	
IGD GTT Graphics smemory size	No VT mode, 2MB	
IGD Graphics Mode Select	Enabled, 64MB	
DVMT Memory	256MB	
Memory Remap Feature	Enabled	
HPET	Enabled	
		Options
		Auto
		667 MHz
		800 MHz

↑↓ → ←: Move   Enter: Select   +/-: Value   F10: Save   ESC: Exit  
F1: General Help   F9: Load Default Settings

#### DRAM Frequency (Auto)

This item enables users to adjust the DRAM frequency. The default setting is auto and we recommend users leave the setting unchanged. Modify it at will may cause the system to be unstable.

#### Configure DRAM Timing by SPD (Enabled)

When this item is set to enable, the DDR timing is configured using SPD. SPD (Serial Presence Detect) is located on the memory modules, BIOS reads information coded in SPD during system boot up.

#### IGD GTT Graphics memory size (No VT mode, 2MB)

This item is used to select the amount of Main Memory that is pre-allocated to support the Internal Graphics Translation Table when IGD (Internal Graphics Device) is enabled.

#### IGD Graphics Mode Select (Enabled, 64MB)

This item is used to select the amount of Main Memory that is pre-allocated to support the Internal Graphics device in VGA (non-linear) and Native (linear) modes when Internal graphics is enabled.

#### DVMT Memory (256MB)

When set to Fixed Mode, the graphics driver will reserve a fixed portion of the system memory as graphics memory, according to system and graphics requirements.

#### Memory Remap Feature (Enabled)

This item allows you to remap the overlapped PCI memory above the total physical memory if you have a 64 bit OS and 8 GB of RAM.

#### HPET (Enabled)

This item enables or disables HPET (High Precision Event Timer) support.

Press <Esc> to return to the main menu setting page.

Introducing the Motherboard

**Integrated Peripherals**

This page sets up some parameters for peripheral devices connected to the system.  
CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
Integrated Peripherals

Onboard SATA Mode	Enhanced	Help Item
Onboard LAN Function	Enabled	
Onboard LAN Boot ROM	Disabled	
Onboard AUDIO Function	Enabled	Options
Serial Port1 Address	3F8&IRQ4	Disabled
Serial Port2 Address	2F8&IRQ3	Compatible
OnBoard CIR Port	Disabled	Enhanced
Parallel Port Address	378	
Parallel Port Mode	Normal	
Parallel Port IRQ	IRQ7	
USB Functions	Enabled	
Legacy USB Support	Enabled	

↑↓ → ← : Move    Enter : Select    +/- : Value    F10: Save    ESC: Exit  
F1: General Help    F9: Load Default Settings

**Onboard SATA Mode (Enhanced)**

Use this item to select the mode of the Serial ATA.

**OnBoard LAN Function (Enabled)**

Use this item to enable or disable the onboard LAN function.

**OnBoard LAN Boot ROM (Disabled)**

Use this item to enable or disable the booting from the onboard LAN or a network add-in card with a remote boot ROM installed.

**OnBoard AUDIO Function (Enabled)**

Use this item to enable or disable the onboard Audio function.

**Serial Port1/2 Address (3F8/IRQ4 2F8/IRQ3)**

Use this item to enable or disable the onboard COM1/2 serial port, and to assign a port address.

**OnBoard CIR Port (Disabled)**

Use this item to enable or disable the OnBoard CIR Port.

**Parallel Port Address (378)**

Use this item to enable or disable the onboard Parallel port, and to assign a port address.

**Parallel Port Mode (Normal)**

Use this item to select the parallel port mode. You can select Normal (Standard Parallel Port), ECP (Extended Capabilities Port), EPP (Enhanced Parallel Port), or BPP (Bi-Directional Parallel Port).



**Parallel Port IRQ (IRQ7)**

Use this item to assign IRQ to the parallel port.

**USB Functions (Enabled)**

Use this item to enable or disable the USB function.

**Legacy USB Support (Enabled)**

Use this item to enable or disable support for legacy USB devices. Setting to Auto allows the system to detect the presence of USB device at startup. If detected, the USB controller legacy mode is enabled. If no USB device is detected, the legacy USB support is disabled.

Press <Esc> to return to the main menu setting page.

**Power Management Setup**

This page sets up some parameters for system power management operation.

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
Power Management Setup

ACPI Suspend Type	S3 (STR)	Help Item
Soft-off by PWR-BTTN	Instant Off	Select the ACPI state used for System Suspend.
PWRON After PWR-Fail	Power Off	
Resume by Ring	Disabled	
Resume by PCI/ PCI-E/Lan PME	Disabled	
Resume by USB (S3)	Disabled	
Resume By PS2 KB (S3)	Disabled	
Resume By PS2 MS (S3)	Disabled	
Resume on RTC Alarm	Disabled	

↑↓→←: Move Enter: Select +/-: Value F10: Save ESC: Exit  
F1: General Help F9: Load Default Settings

**ACPI Suspend Type (S3(STR))**

Use this item to define how your system suspends. In the default, S3, the suspend mode is a suspend to RAM, i.e, the system shuts down with the exception of a refresh current to the system memory.

**Soft-Off By PWR-BTTN (Instant Off)**

Under ACPI (Advanced Configuration and Power management Interface) you can create a software power down. In a software power down, the system can be resumed by Wake Up Alarms. This item lets you install a software power down that is controlled by the power button on your system. If the item is set to Instant-Off, then the power button causes a software power down. If the item is set to Delay 4 Sec, then you have to hold the power button down for four seconds to cause a software power down.

**PWRON After PWR-Fail (Power Off)**

This item enables your computer to automatically restart or return to its operating status.

Introducing the Motherboard

**Resume by Ring (Disabled)**

An input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem) awakens the system from a soft off state.

**Resume by PCI/PCI-E/Lan PME (Disabled)**

These items specify whether the system will be awakened from power saving modes when activity or input signal of the specified hardware peripheral or component is detected.

**Resume by USB (S3) (Disabled)**

This item allows users to enable or disable the USB device Wake-up from S3 mode.

**Resume By PS2 KB (S3) (Disabled)**

Use this item to allow keyboard activity to awaken the system from power saving mode.

**Resume By PS2 MS (S3) (Disabled)**

This item enables or disables you to allow mouse activity to awaken the system from power saving mode.

**Resume on RTC Alarm (Disabled)**

The system can be turned off with a software command. If you enable this item, the system can automatically resume at a fixed time based on the system's RTC (realtime clock). Use the items below this one to set the date and time of the wake-up alarm. You must use an ATX power supply in order to use this feature.

Press <Esc> to return to the main menu setting page.

**PCI / PnP Setup**

This page sets up some parameters for devices installed on the PCI bus and those utilizing the system plug and play capability.

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
PCI / PnP Setup

Init Display First	PCI	Help Item
Allocate IRQ to PCI VGA	Yes	Select which graphics controller to use as the primary boot device.

↑↓ → ←: Move    Enter: Select    +/-: Value    F10: Save    ESC: Exit  
F1: General Help    F9: Load Default Settings

**Init Display First (PCI)**

Use this item to select which graphics controller to use as the primary boot devices.

**Allocate IRQ to PCI VGA (Yes)**

If this item is enabled, an IRQ will be assigned to the PCI VGA graphics system. You set this value to No to free up an IRQ.

Press <Esc> to return to the main menu setting page.

### PC Health Status

On motherboards support hardware monitoring, this item lets you monitor the parameters for critical voltages, temperatures and fan speeds.

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
PC Health Status

-- System Hardware Monitor --		Help Item
► Smart Fan Function	Press Enter	
CPU Temperature	: 47°C/116°F	
System Temperature	: 22°C/71°F	
CPU FAN Speed	: 3479 RPM	
SYS FAN Speed	: N/A	
PWR FAN Speed	: N/A	
CPU Core	: 1.296V	
VDIMM	: 1.824V	
Warning Temperature	Disabled	
Shutdown Temperature	Disabled	

↑↓ → ← : Move   Enter : Select   +/- : Value   F10: Save   ESC: Exit  
F1: General Help   F9: Load Default Settings

#### ► Smart Fan Function

Scroll to this item and press <Enter> to view the following screen:

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
Smart Fan Function

		Help Item
CPU SMART FAN Control	Enabled	
SMART Fan start PWM value	50	
SMART Fan start PWM TEMP (°C)	50	
DeltaT	+3	
SMART Fan Slope PWM value	4 PWM value/°C	
CPU Fan Full Limit Temp. (°C)	69°C	
		Options
		Disabled
		Enabled

↑↓ → ← : Move   Enter : Select   +/- : Value   F10: Save   ESC: Exit  
F1: General Help   F9: Load Default Settings

#### **CPU SMART FAN Control (Enabled)**

This item enables you to define the CPU temperature by smartly adjusting the CPU fan. When it is set at certain temperature, the CPU Fan PWM value will change accordingly.

#### **SMART Fan start PWM value (50)**

This item is used to set the start PWM value of the smart fan.

#### **SMART Fan start PWM TEMP (°C) (50)**

This item is used to set the start temperature of the smart fan.

Introducing the Motherboard

**DeltaT (+3)**


This item specifies the range that controls CPU temperature and keeps it from going so high or so low when smart fan works.

**SMART Fan Slope PWM value (4 PWM value/°C)**

This item is used to set the Slope Select PWM of the smart fan.

**CPU Fan Full Limit Temp. (°C) (69°C)**

This item is used to set the limit temperature of the smart fan.

 ECS supports the latest PECI host technology. While using Wolfdale or Yorkfield CPU, the original images of the BIOS item “PC Health Status” and “Smart FAN Function” will be replaced by PECI mode and negative number. (The max data from PECI is zero.)

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
PC Health Status

<div>-- System Hardware Monitor--</div> <div>▶ Smart Fan Function</div> <div>System Temperature : 22°C/71°F</div> <div>CPU FAN Speed : 3571 RPM</div> <div>SYS FAN Speed : N/A</div> <div>PWR FAN Speed : N/A</div> <div>CPU Core : 1.104V</div> <div>VDIMM : 1.824V</div> <div>-- PECI Mode--</div> <div>Offset to TCC Activation Temp.: -81</div>	Help Item
---	-----------

↑↓ → ← : Move    Enter : Select    +/- : Value    F10: Save    ESC: Exit  
F1: General Help    F9: Load Default Settings

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
Smart Fan Function

<div>CPU SMART FAN Control</div> <div>SMART Fan start PWM value</div> <div>SMART Fan start PWM TEMP (-)</div> <div>DeltaT</div> <div>SMART Fan Slope PWM value</div> <div>CPU Fan Full Speed Offset (-)</div>	<div>Enabled</div> <div>28</div> <div>30</div> <div>+3</div> <div>5</div> <div>10</div>	Help Item
		<div>Options</div> <div>Disabled</div> <div>Enabled</div>

↑↓ → ← : Move    Enter : Select    +/- : Value    F10: Save    ESC: Exit  
F1: General Help    F9: Load Default Settings

Press <Esc> to return to the PC Health Status page.

### System Component Characteristics

These items display the monitoring of the overall inboard hardware health events, such as System & CPU temperature, CPU & DIMM voltage, CPU & system fan speed,...etc.

- CPU/System Temperature
- CPU/SYS FAN Speed
- CPU Core
- VDIMM

### Warning Temperature (Disabled)

This item lets you select the temperature at which you want the system to send out a warning message to the PC speakers when the temperature goes beyond either limit. You can select the temperatures you want.

### Shutdown Temperature (Disabled)

Enable you to set the maximum temperature the system can reach before powering down.

Press <Esc> to return to the main menu setting page.

### Frequency/Voltage Control

This page enables you to set the clock speed and system bus for your system. The clock speed and system bus are determined by the kind of processor you have installed in your system.

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
Frequency/Voltage Control

Manufacturer : Intel Ratio Actual Value: 8 CPU Frequency Setting : 333MHz CPU Over-clocking Func.: Disabled Auto Detect DIMM/PCI Clk Enabled Spread Spectrum Enabled Memory Voltage Normal Ratio Setting 0.670		Help item Options Disabled Enabled
---	--	---

↑↓ → ← : Move    Enter : Select    +/- : Value    F10: Save    ESC: Exit  
F1: General Help    F9: Load Default Settings

### Manufacturer (Intel)

This item displays the information of current manufacturer of the CPU installed in your computer.

### Ratio Actual Value (8)

This item shows the actual ratio of the CPU installed in your System.

### CPU Frequency Setting (333MHz)

This item indicates the current CPU frequency. Users can not make any change to this item. Please noted that the frequency will be varied with different CPU.

Introducing the Motherboard

**CPU Over-clocking Func. (Disabled)**

This item decides the CPU over-clocking function/frequency installed in your system. If the over-clocking fails, please turn off the system power. And then, hold the PageUp key (similar to the Clear CMOS function) and turn on the power, the BIOS will recover the safe default.

**Auto Detect DIMM/PCI Clk (Enabled)**

When this item is enabled, BIOS will disable the clock signal of free DIMM/PCI slots.

**Spread Spectrum (Enabled)**

If you enable spread spectrum, it can significantly reduce the EMI (Electro-Magnetic Interference) generated by the system.

**Memory Voltage (Normal)**

This item allows users to adjust the DDR memory voltage.

**Ratio Setting (0.670)**

Use this item to set the ratio of the CPU installed in your System.

Press <Esc> to return to the main menu setting page.

**Load Default Settings**

This option opens a dialog box to ask if you are sure to install optimized defaults or not. You select [OK], and then <Enter>, the Setup Utility loads all default values; or select [Cancel], and then <Enter>, the Setup Utility does not load default values.

**Supervisor Password**

This page helps you install or change a password.

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
Supervisor Password

Supervisor Password :Not Installed		Help item
Change Supervisor Password	Press Enter	Install or Change the password.

↑↓ → ← : Move    Enter : Select    +/- : Value    F10: Save    ESC: Exit  
F1: General Help    F9: Load Default Settings

**Supervisor Password (Not Installed)**

This item indicates whether a supervisor password has been set. If the password has been installed, *Installed* displays. If not, *Not Installed* displays.

**Change Supervisor Password (Press Enter)**

You can select this option and press <Enter> to access the sub menu. You can use the sub menu to change the supervisor password.

Press <Esc> to return to the main menu setting page.

## User Password

This page helps you install or change a password.

CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.  
User Password

User Password : Not Installed		Help item
Change User Password	Press Enter	Install or Change the password.

↑↓ → ←: Move    Enter: Select    +/-: Value    F10: Save    ESC: Exit  
F1: General Help    F9: Load Default Settings

### User Password (Not Installed)

This item indicates whether a user password has been set. If the password has been installed, *Installed* displays. If not, *Not Installed* displays.

### Change User Password (Press Enter)

You can select this option and press <Enter> to access the sub menu. You can use the sub menu to change the user password.

Press <Esc> to return to the main menu setting page.

## Save & Exit Setup

Highlight this item and press <Enter> to save the changes that you have made in the Setup Utility and exit the Setup Utility. When the Save and Exit dialog box appears, select [OK] to save and exit, or select [Cancel] to return to the main menu.

## Exit Without Saving

Highlight this item and press <Enter> to discard any changes that you have made in the Setup Utility and exit the Setup Utility. When the Exit Without Saving dialog box appears, select [OK] to discard changes and exit, or select [Cancel] to return to the main menu.



*If you have made settings that you do not want to save, use the “Exit Without Saving” item and select [OK] to discard any changes you have made.*

### ***Updating the BIOS***

You can download and install updated BIOS for this motherboard from the manufacturer's Web site. New BIOS provides support for new peripherals, improvements in performance, or fixes for known bugs. Install new BIOS as follows:

- 1 If your motherboard has a BIOS protection jumper, change the setting to allow BIOS flashing.
- 2 If your motherboard has an item called Firmware Write Protect in Advanced BIOS features, disable it. (Firmware Write Protect prevents BIOS from being overwritten.)
- 3 Prepare a bootable device or create a bootable system disk. (Refer to Windows online help for information on creating a bootable system disk.)
- 4 Download the Flash Utility and new BIOS file from the manufacturer's Web site. Copy these files to the bootable device.
- 5 Turn off your computer and insert the bootable device in your computer. (You might need to run the Setup Utility and change the boot priority items on the Advanced BIOS Features Setup page, to force your computer to boot from the bootable device first.)
- 6 At the C:\ or A:\ prompt, type the Flash Utility program name and the file name of the new BIOS and then press <Enter>. Example: AMINF340.EXE040706.ROM
- 7 When the installation is complete, remove the bootable device from the computer and restart your computer. If your motherboard has a Flash BIOS jumper, reset the jumper to protect the newly installed BIOS from being overwritten. The computer will restart automatically.

This concludes Chapter 3. Refer to the next chapter for information on the software supplied with the motherboard.



## Chapter 4

### Using the Motherboard Software

#### About the Software CD-ROM

The support software CD-ROM that is included in the motherboard package contains all the drivers and utility programs needed to properly run the bundled products. Below you can find a brief description of each software program, and the location for your motherboard version. More information on some programs is available in a README file, located in the same directory as the software. Before installing any software, always inspect the folder for files named README.TXT, INSTALL.TXT, or something similar. These files may contain important information that is not included in this manual.



1. Never try to install all software from folder that is not specified for use with your motherboard.
2. The notice of Intel HD audio installation (optional): The Intel High Definition audio functionality unexpectedly quits working in Windows Server 2003 Service Pack 1 or Windows XP Professional x64 Edition. Users need to download and install the update packages from the Microsoft Download Center “before” installing HD audio driver bundled in the Driver CD. Please log on to <http://support.microsoft.com/default.aspx?scid=kb;en-us;901105#appliesto> for more information.


#### Auto-installing under Windows XP/Vista

The Auto-install CD-ROM makes it easy for you to install the drivers and software for your motherboard.



*If the Auto-install CD-ROM does not work on your system, you can still install drivers through the file manager for your OS (for example, Windows Explorer). Refer to the Utility Folder Installation Notes later in this chapter.*

The support software CD-ROM disc loads automatically under Windows XP/Vista. When you insert the CD-ROM disc in the CD-ROM drive, the autorun feature will automatically bring up the install screen. The screen has three buttons on it, Setup, Browse CD and Exit.

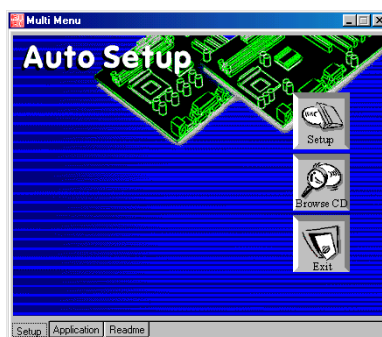

*If the opening screen does not appear; double-click the file “setup.exe” in the root directory.*

### Using the Motherboard Software

**Setup Tab**

<b>Setup</b>	Click the <b>Setup</b> button to run the software installation program. Select from the menu which software you want to install.
<b>Browse CD</b>	<p>The <b>Browse CD</b> button is the standard Windows command that allows you to open Windows Explorer and show the contents of the support CD.</p> <p>Before installing the software from Windows Explorer, look for a file named README.TXT, INSTALL.TXT or something similar. This file may contain important information to help you install the software correctly.</p> <p>Some software is installed in separate folders for different operating systems.</p> <p>In installing the software, execute a file named SETUP.EXE or INSTALL.EXE by double-clicking the file and then following the instructions on the screen.</p>
<b>Exit</b>	The <b>EXIT</b> button closes the Auto Setup window.

**Application Tab**

Lists the software utilities that are available on the CD.


**Read Me Tab**

Displays the path for all software and drivers available on the CD.

**Running Setup**

*Follow these instructions to install device drivers and software for the motherboard:*

1. Click **Setup**. The installation program begins:

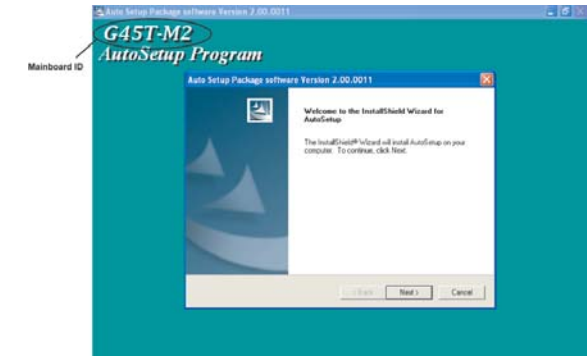


*The following screens are examples only. The screens and driver lists will be different according to the motherboard you are installing.*


The motherboard identification is located in the upper left-hand corner.

Using the Motherboard Software

2. Click **Next**. The following screen appears:

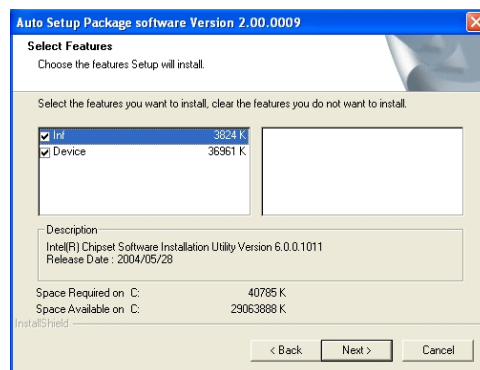

3. Check the box next to the items you want to install. The default options are recommended.
4. Click **Next** run the Installation Wizard. An item installation screen appears:

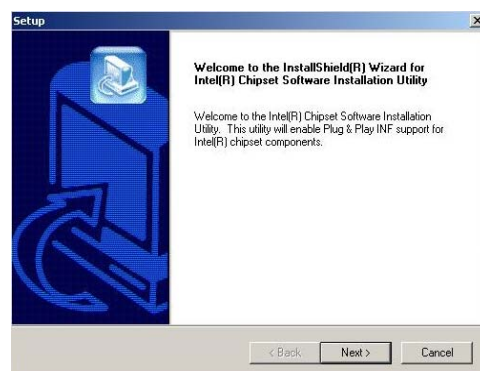

5. Follow the instructions on the screen to install the items.




1. Drivers and software are automatically installed in sequence. Follow the onscreen instructions, confirm commands and allow the computer to restart a few times to complete the installation.
2. During the Windows Vista Driver Auto Setup Procedure, users should use one of the following two methods to install the driver after the system restart.

## Using the Motherboard Software

### *Method 1. Run Reboot Setup*

Windows Vista will block startup programs by default when installing drivers after the system restart. You must select taskbar icon **Run Blocked Program** and run **Reboot Setup** to install the next driver, until you finish all drivers installation.

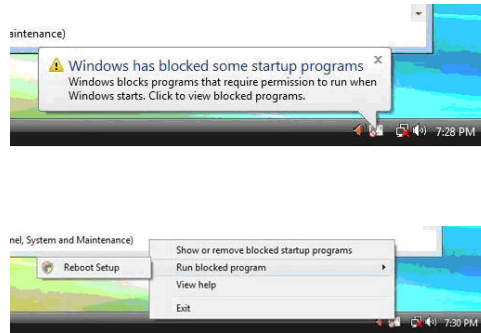


### *Method 2. Disable UAC (User Account Control)*

\* For administrator account only. Standard user account can only use Method 1.

Disable Vista UAC function before installing drivers, then use CD driver to install drivers, it will continue to install drivers after system restart without running blocked programs.


*Follow these instructions to Disable Vista UAC function:*

1. Go to **Control Panel**.

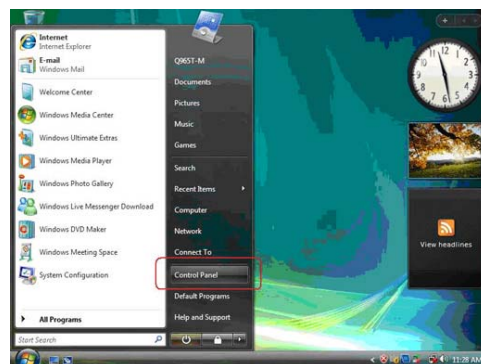


Using the Motherboard Software


2. Select **Classic View**.

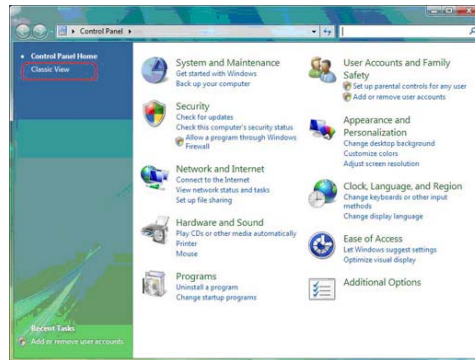

3. Set **User Account**.

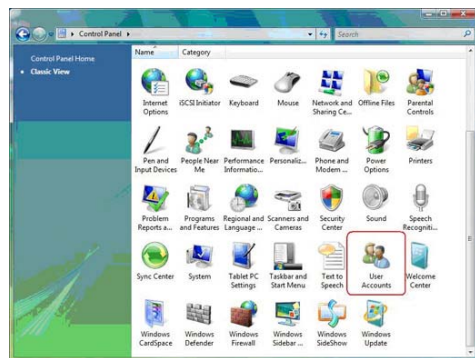


4. Select **Turn User Account Control on or off** and press **Continue**.

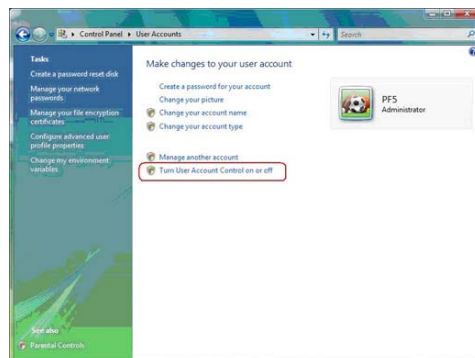

Using the Motherboard Software

5. Disable **User Account Control (UAC)** to help protect your computer item and press **OK**, then press **Restart Now**. Then you can restart your computer and continue to install drivers without running blocked programs.

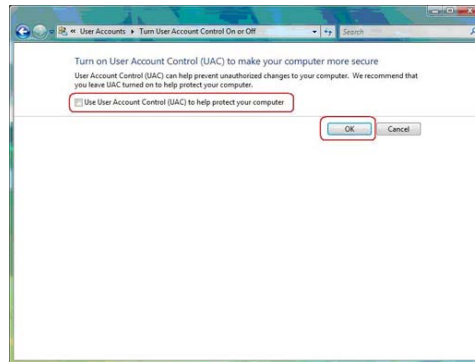

## Manual Installation

Insert the CD in the CD-ROM drive and locate the PATH.DOC file in the root directory. This file contains the information needed to locate the drivers for your motherboard.

Look for the chipset and motherboard model; then browse to the directory and path to begin installing the drivers. Most drivers have a setup program (SETUP.EXE) that automatically detects your operating system before installation. Other drivers have the setup program located in the operating system subfolder.

If the driver you want to install does not have a setup program, browse to the operating system subfolder and locate the readme text file (README.TXT or README.DOC) for information on installing the driver or software for your operating system.

## Utility Software Reference

All the utility software available from this page is Windows compliant. They are provided only for the convenience of the customer. The following software is furnished under license and may only be used or copied in accordance with the terms of the license.




*These software(s) are subject to change at anytime without prior notice. Please refer to the support CD for available software.*

## Using the Motherboard Software

## HDMI Audio Setting SOP

OS: XP system

### 1. Control Panel-->Sound and Audio Device Properties

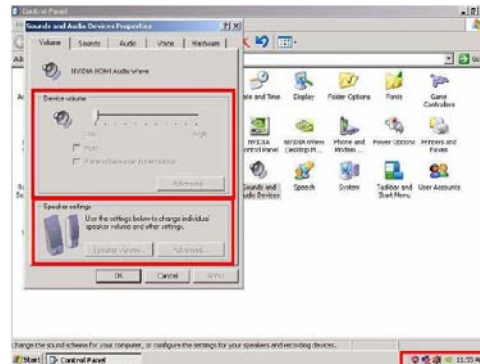


#### 2. a. Audio--> Sound playback--> Default device--> HD Audio Output

#### b. Audio--> Sound playback--> Default device--> HDMI Audio Output



#### 3. a. User Playback Audio speaker function working


#### b. User Playback HDMI speaker function working

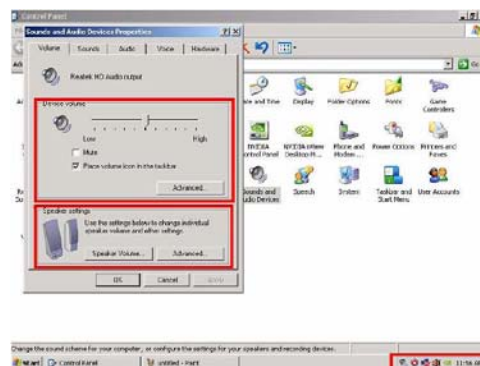


Using the Motherboard Software

## OS: Vista system

**Control Panel--> Sound--> Sound--> Digital Output Device (HDMI) --> Set Default**

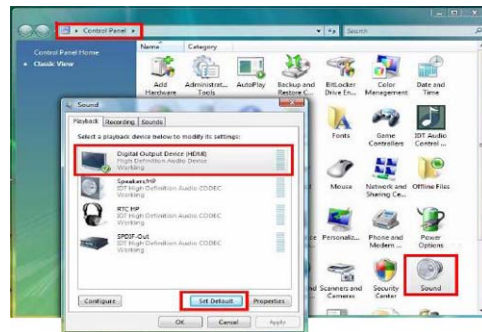


### 1. Volume --> Playback

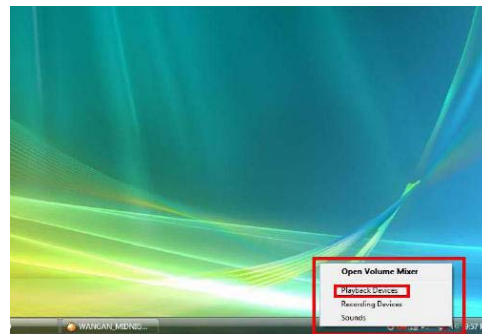

### 2. Digital Output Device (HDMI) --> Set Default --> OK

User HDMI Playback function working

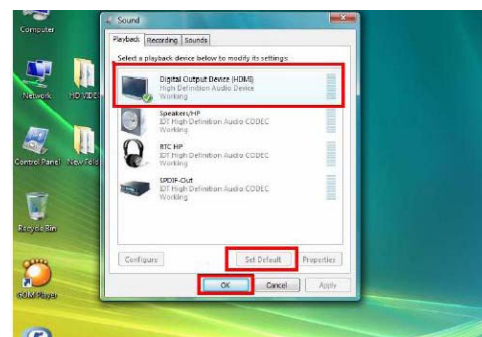

Using the Motherboard Software




### 3. Speaker --> Set Default --> OK

*User Speaker Playback function working*



### 4. SPDIF-Out --> Set Default --> OK

*User SPDIF-Out Playback function working*

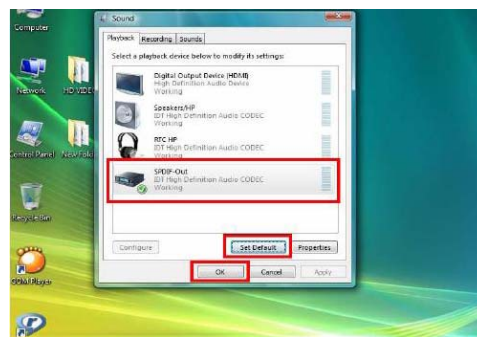

This concludes chapter 4.

Using the Motherboard Software

*Memo*